



# HORIZONTAL AXIS CONTINUOUS CENTRIFUGES Type EC



EC 06

## KEYS FEATURES OF EC CENTRIFUGES



- Machine to be installed on a ground or mezzanine floor.
- Hinged casing for full opening and easy access to the basket.
- Separated feeding and washing pipes and outlets.
- Vibrator on casing for easier solid discharge.



- Scroll type centrifuge.
- Continuous running particularly suitable for most continuous chemical processing lines.
- Wide application range:
- G effect from 2000 to 2500.
- Temperature from 0 to 200° C.
- Solid particle size from 50 microns.
- High output up to 10 tons/hour.




• Minimum vibration transmission due to centrifuge mass and heavy-duty antivibration pads.

• Torque limitation between basket and screw.

### GENERAL DESIGN OF EC TYPE CENTRIFUGES

ROUSSELET ROBATEL continuous centrifugal dehydrators are centrifuges designed with a filtering basket. They assure the separation, the eventual washing and the drying of a solid phase suspended into a liquid phase.

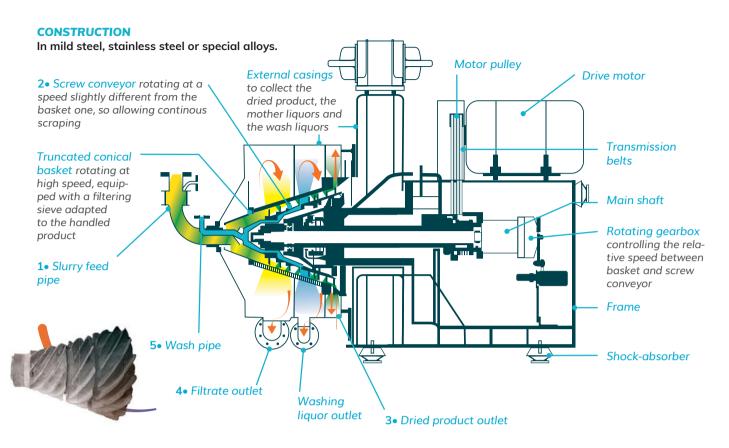

#### **OPERATION:**

• The slurry to be processed is fed by gravity or by pump through feed pipe<sup>1</sup>.

• Due to centrifugal force, the solid product is thrown against the inner wall of the basket.

• It is then continuously discharged by the screw conveyor<sup>2</sup> and discharged through outlet<sup>3</sup>.

### **TECHNICAL CHARACTERISTICS OF EC CENTRIFUGES**

	Standard Data						
TYPE	ø mm	Max speed <b>rpm</b>	Centrifugal Force « <b>G</b> »	L cm	 cm	h cm	Weight <b>kg</b>
EC 03	300	3600	2560	170	130	150	1000
EC 04	400	2900	2250	210	150	175	2400
EC 06	600	2300	2300	250	200	190	4500

More models on request.

HEADQUARTERS

ROUSSELET ROBATEL 45 Avenue Rhin et Danube Parc d'activité économique de Marenton 07104 ANNONAY - FRANCE Tel. : +33 / (0) 4 75 69 22 11 Fax : +33 / (0) 4 75 67 69 80 E-mail : info@rousselet-robatel.com UK Rousselet UK Ltd Parkside House, 17 East Parade HARROGATE NORTH YORKSHIRE HG1 5LF Tel : + 44 (0)1 423 530 093 Fax : + 44 (0)1 423 530 120 E-mail : info@rousselet-robatel.com CZECH REPUBLIC Rousselet Robatel CZ Počernická 96 CZ – 108 00 Praha 10

Tel : +420 296 411 402 Fax : +420 296 411 403 E-mail : cz@rousselet-robatel.com USA Robatel Inc. 703 West Housatonic Street PITTSFIELD MA 01201 Tel : + 1 413 499 4818 Fax : + 1 413 499 5648 E-mail : sales@rousselet-robatel.us

• The filtrate liquid is discharged through outlet<sup>4</sup>.

• The wash pipe<sup>5</sup> allows washing liquids to rince solids prior to final spinning and discharging.

WWW.ROUSSELET-ROBATEL.COM